


VariQuest™ Cutout Maker 1800 Unpacking and Setup Instructions


Step 1. Unpacking the Cutout Maker

The Cutout Maker and accessories are packed in a cardboard carton with foam padding for protection during shipment. Carefully unpack the items and keep the packing materials. If you need to ship the Cutout Maker in the future, repack the system as shown below.

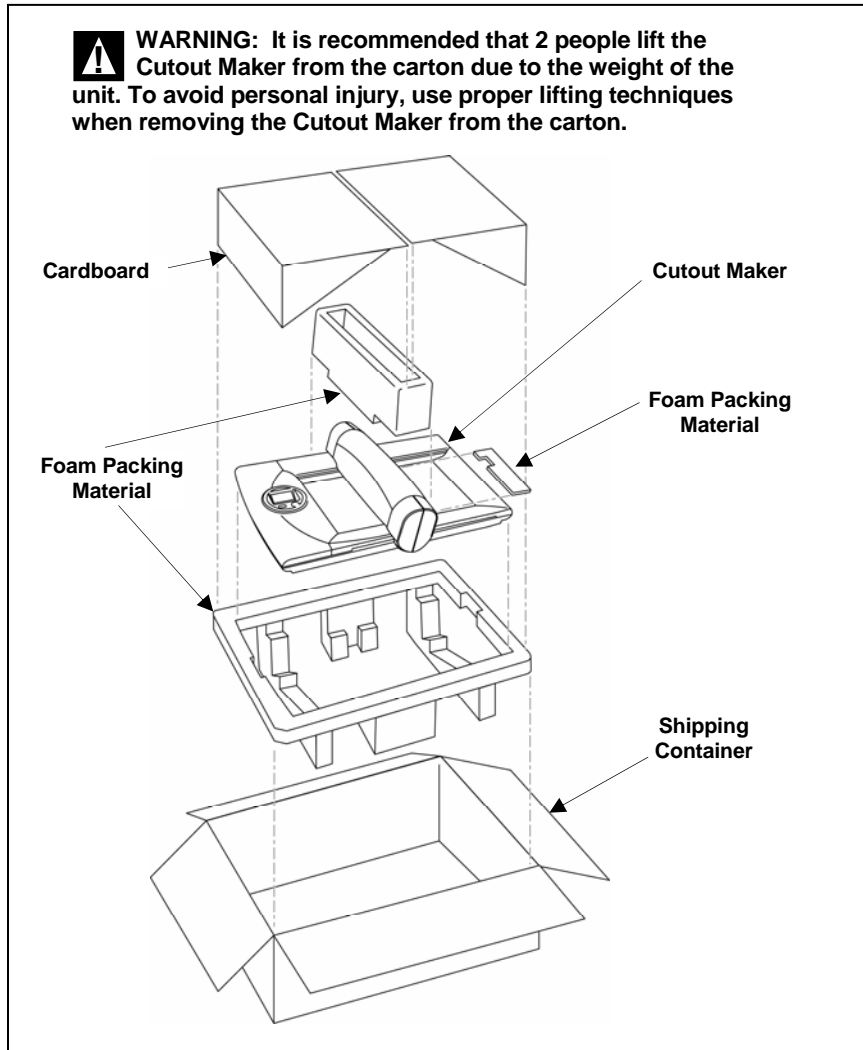


Step 2. Verify the Package Contents

After unpacking, verify that all of the following items have been included in the Cutout Maker box.

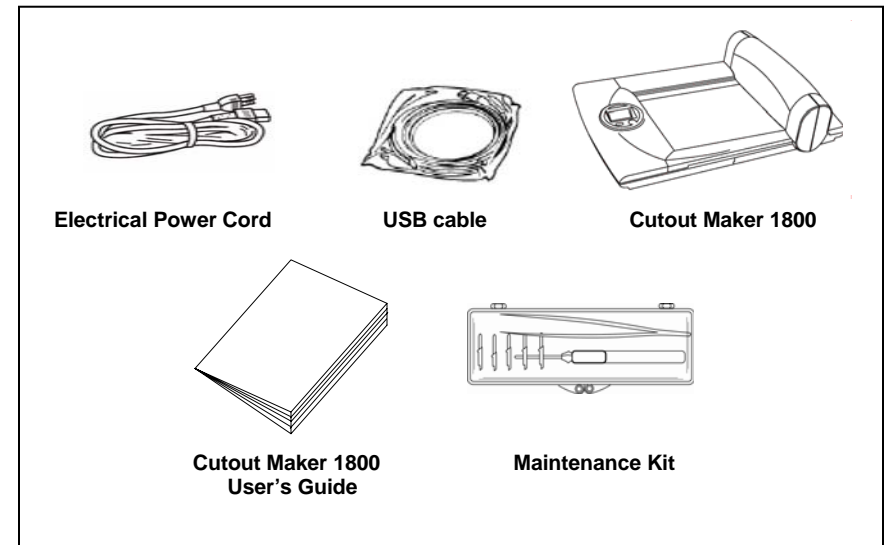

Step 3. Position the Cutout Maker

To ensure proper functioning of the Cutout Maker on a work space, allow adequate space around the system as shown below.

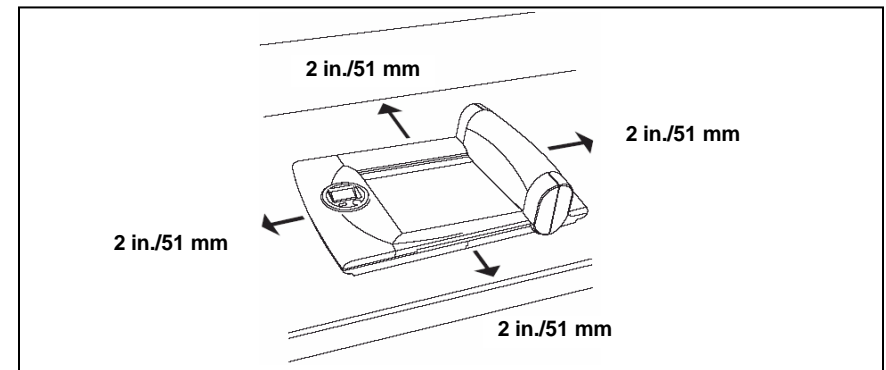


Step 4. Connect the Cutout Maker to a VariQuest™ Design Center 1000 or Personal Computer

IMPORTANT! Use the USB cable supplied with the Cutout Maker to connect to the VariQuest™ Design Center 1000 or a PC. The USB cable complies with FCC “Rules and Regulations,” Part 15 for Class A Equipment using fully shielded six-foot data cables. Use of longer cables or unshielded cables may increase radiation emissions above the Class A limits. The power cord must be inserted into the receptacle on the side of the Cutout Maker before connecting the communication cables.


Connecting to a VariQuest™ Design Center 1000

Connect the Cutout Maker and other peripheral devices to the Design Center 1000 as shown in the illustration.

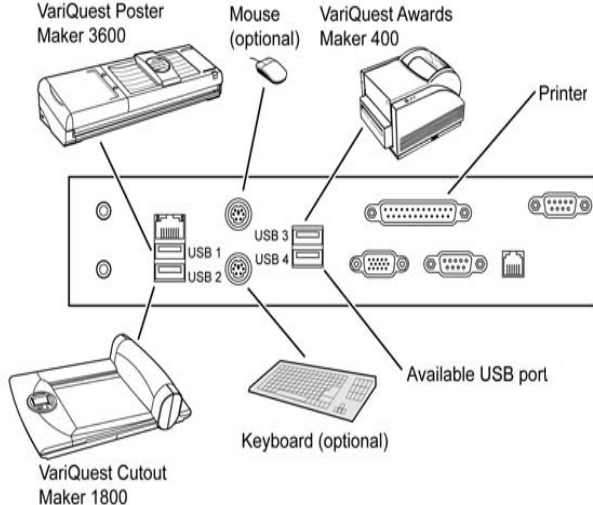

Connecting to a Personal Computer

The Cutout Maker provides a standard interface for connecting to a computer (USB connector). Connect one end of the cable provided to an available USB connector on the computer, and connect the remaining end to the USB connector on the Cutout Maker.

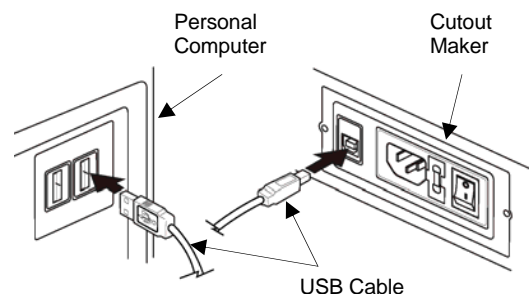


Step 5. Connect the Power Cord

⚠ WARNING: Never operate the Cutout Maker in an area where it can get wet. Always connect the power cord to the Cutout Maker before inserting the plug into a wall socket.

Connect the power cord to the Cutout Maker and insert the power plug into a wall socket:

1. Set the power switch to its “0” (OFF) position.
2. The power cord has a three-prong female connector on one end that must be inserted into the male power receptacle on the left side of the Cutout Maker.
3. Plug the other end of the cord into an appropriate AC outlet.

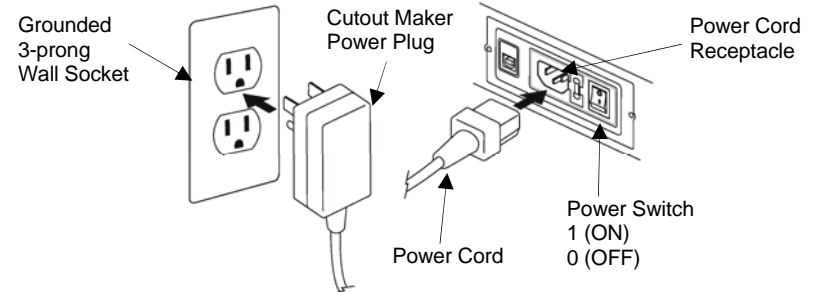

Step 6. Turn on Power to the Cutout Maker and Load the Software

1. Power up the Cutout Maker and the Design Center 1000 or personal computer. Refer to the VariQuest™ Cutout Maker 1800 User's Guide.
2. Install the VariQuest™ Design Center Software if it has not yet been installed in the Design Center 1000 or personal computer. Refer to the VariQuest™ Design Center 1000 User's Guide.

